




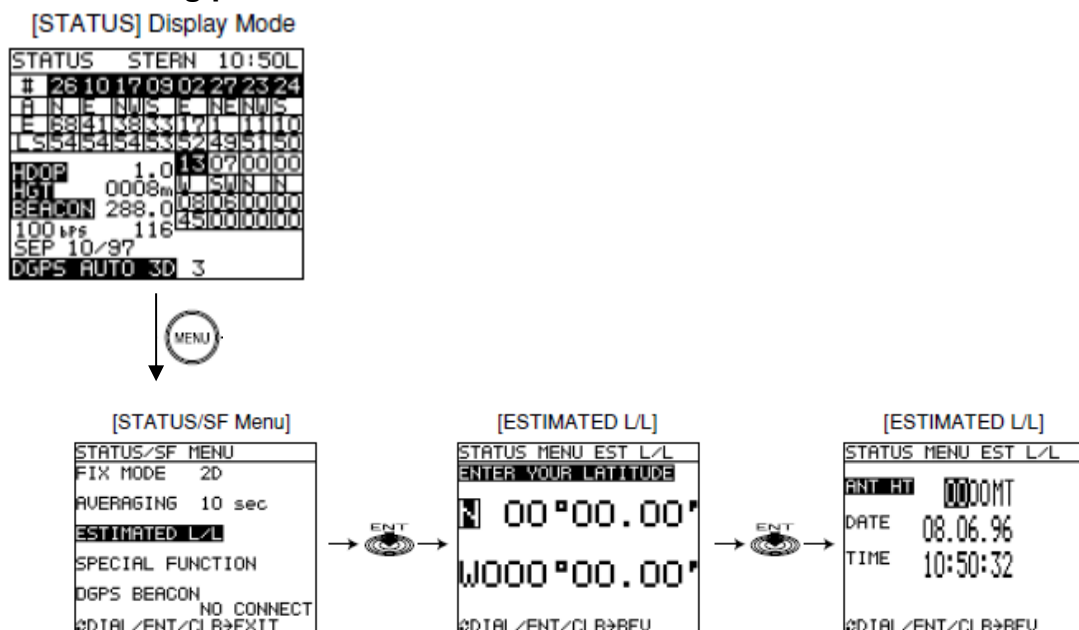

Setting method of JLR-10/10T

When the rollover occurs on JLR-10/JLR-10T, the correct date can be output by initializing the current date and time.

• Initial setting procedure on JLR-10/JLR-10T



- (1) Press  in the " STATUS " display mode.
This action displays the " STATUS/SF MENU ".
- (2) Turn  to select [ESTIMATED L/L] and press .
The [ENTER YOUR LATITUDE] is highlighted.
- (3) Enter the estimated position of the ship. (within a deviation range of 1°).
[ANT HT] is now highlighted.
- (4) Enter the height of the ship's antenna.
[DATE] is now highlighted.
- (5) Enter local time (date). (month/day/year)
[TIME] is now highlighted.
- (6) Enter local time (time). (hour /minute/second)
There is no need to enter the second value, only press .