


## Setting Procedure for JLR-7600

Even if rollover occurs in the JLR-7600, the correct date can be displayed by initial setting.

### Initial setting procedure for JLR-7600

1. Display a main menu by pressing  (normal mode).
2. Press  and  for 3 seconds.  
The menu is changed to a maintenance menu (maintenance mode).  
When the mode is changed to a maintenance mode, the [M] icon is displayed at the bottom of the screen.
3. Press the  key to select "SENSOR" and "INITIALIZATION."

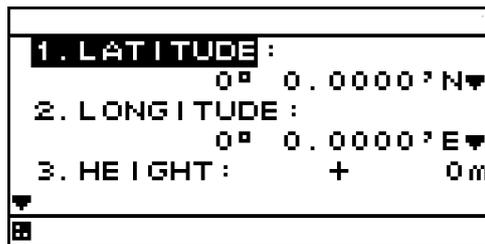

4. Press the  key to select the items to be set, enter each value, and press the  key.
  - (1) LATITUDE: Enter the approximate ship latitude.
  - (2) LONGITUDE: Enter the approximate ship longitude.
  - (3) HEIGHT: Enter the estimated height above the draft line of the sensor.
  - (4) DATE: Enter the current date in UTC.
  - (5) TIME: Enter the current time in UTC.
5. Press the  key to select "SEND", and press the  key.